Compass Chair dimensions

User dimensions (inches)	R310 size 1	R320 size 2	R330 size 3	R340 size 4	R350 size 5
Height	36 – 45	43 – 50	48-57	55-65	65+
Knee to heel	9-13	10½-14½	12½ –16½	14½-18½	16½-20½
Min-max thigh circumference for pelvic harness	101/2-231/2	12-281/2	141/2-301/2	15-341/2	171/2 –381/2

Key user dimension: height / knee to heel

The user's overall height and measurement from knee to heel is a general guide to help you select the appropriate chair. Choose the model that allows for growth.

Important: Make sure that seat width, depth and height are adequate for each user, and that the user's weight does not exceed the maximum working load.

Item dimensions (inches)	R310	R320	R330	R340	R350
Seat height—in 1" increments	9-13	101/2-141/2	121/2-161/2	141/2-181/2	161/2-201/2
Seat depth	91/2	11	12¾	14¾	161/2
Seat width	101/2	121/4	14	161/4	181/4
Backrest height	91/2	11	121/2	141/4	16
Armrest height above the seat	5½	6	7	81/4	83/4
Armrest length	61/2	71/2	81/2	9¾	11
Max. working load (lb)	100	120	175	220	250

2024 order form

Use dimension chart to select appropriate size.



		R310 size 1		R320 size 2		R330 size 3		R340 size 4		R350 size 5	
*Compass chair		R311	\$200 🗌	R321	\$230 🗌	R331	\$260 🗌	R341	\$290 🗌	R351	\$320 🗌
*Leg type CHOOSE	Short (high friction)	R314	\$125 🗌	N/A		N/A		N/A		N/A	
	Short (low friction)	R334	\$125 🗌	N/A		N/A		N/A		N/A	-
	Standard (high friction)	R315*	\$150 🗌	R315	\$150 🗌						
	Standard (low friction)	R335*	\$150 🗌	R335	\$150 🗌						
New! Front stability f	eet (pair)	R326	\$40 🗌	R326	\$40						
New! Rear stability fe	eet (pair)	R327	\$40 🗌								
New! Dynamic feet (s	et of four)	R328	\$100 🗌	R328	\$100 🗌	R328	\$100 🗌	R328	\$100	R328	\$100 🗌
Seat belt		R312	\$47	R312	\$47	R332	\$47	R342	\$47 🗌	R342	\$47 🗌
Pelvic harness		R313	\$170	R323	\$170	R333	\$170	R343	\$170	R353	\$170

* Required

^{*} The standard legs can be used on size 1, but the lower two positions will not be accessible.

