

# Key Measurements for the Rifton Stander

## Use this diagram to get the measurements

you need to select your Rifton Stander size. Most Rifton products have a wide range of adjustment with considerable overlap between sizes. If the client is within range of more than one size, it is usually preferable to choose the larger size to allow for growth.


CLIENT'S NAME

DATE

CLIENT'S WEIGHT

HEIGHT

COMPLETED BY

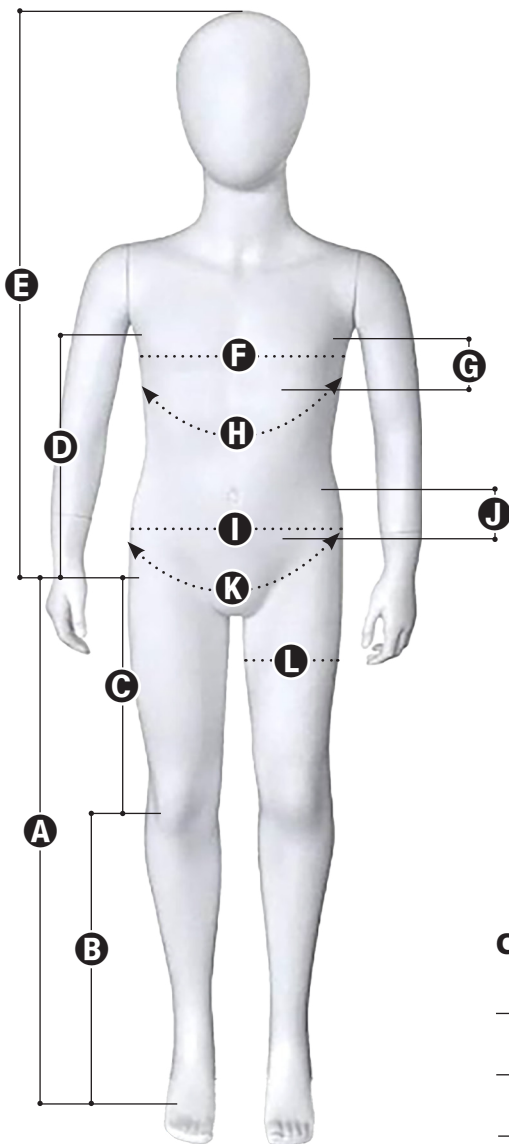

**A:** Bottom of foot/shoe to hip\*  
(total leg length)

**B:** Bottom of foot/shoe to knee joint

**C:** Knee joint to hip\*

**D:** Hip\* to axilla

**E:** Hip\* to top of head

**F:** Chest width

**G:** Chest depth

**H:** Chest circumference

**I:** Hip\* width

**J:** Hip\* depth

**K:** Hip\* circumference

**L:** Thigh width

	LEFT	RIGHT	BOTH
<b>A:</b> Bottom of foot/shoe to hip* (total leg length)			
<b>B:</b> Bottom of foot/shoe to knee joint			
<b>C:</b> Knee joint to hip*			
<b>D:</b> Hip* to axilla			
<b>E:</b> Hip* to top of head			
<b>F:</b> Chest width			
<b>G:</b> Chest depth			
<b>H:</b> Chest circumference			
<b>I:</b> Hip* width			
<b>J:</b> Hip* depth			
<b>K:</b> Hip* circumference			
<b>L:</b> Thigh width			

\*For all hip measurements, use the greater trochanter as reference point.

### Comments:

---



---



---



# Rifton Stander Measurements

Measurement	Stander Dimension	Size 1 (S410)	Size 2 (S420)
<b>A</b> Bottom of shoe to hip	Total stander leg length	13¼" – 22" (34 – 56 cm)	18½" – 29" (47 – 74 cm)
<b>B</b> Bottom of shoe to knee	Lower leg support length	6¾" – 11" (17 – 28 cm)	10" – 15¼" (25 – 39 cm)
<b>C</b> Knee to hip	Thigh support length	6¼" – 10½" (16 – 27 cm)	8½" – 13½" (22 – 34 cm)
<b>D</b> Hip to axilla	(Prone config.) Hip to top of trunk support	9" (23 cm)	9" – 11" (23 – 28 cm)
<b>E</b> Hip to top of head	(Supine config.) Hip to headrest height	18" – 20½" (46 – 52 cm)	21" – 25" (53 – 64 cm)
<b>F</b> Chest width	Width of trunk support without laterals	7¾" (20 cm)	9" (23 cm)
	Distance between upper trunk laterals	5½" – 10" (14 – 25 cm)	7" – 11½" (18 – 29 cm)
<b>G</b> Chest depth	Lateral supports	4¼" (11 cm)	4¼" (11 cm)
<b>H</b> Chest circumference	Max rotation control strap girth	26" (66 cm)	32" (81 cm)
<b>I</b> Hip width	Width of hip panel	8" (20 cm)	10" (25 cm)
	Distance between lower trunk laterals	5½" – 10" (14 – 25 cm)	7" – 11½" (18 – 29 cm)
<b>J</b> Hip depth	Lateral supports	4¼" (11 cm)	4¼" (11 cm)
<b>K</b> Hip circumference	Max. rotation control strap girth	26" (66 cm)	32" (81 cm)
<b>L</b> Thigh width	Width of thigh support without laterals	4" (10 cm)	5" (13 cm)
	Width between medial and lateral thigh supports	2½" – 4" (6 – 10 cm)	3¼" – 5" (8 – 13 cm)